

Plate Nesting Syllabus

- 1 General Overview and Set-up
- 1.16 System defaults
- 1.17 Burning machine data
- 2 Getting Started
- 2.16 Opening & Closing the Nesting Application
- 2.17 Starting a New Nest
- 2.18 Storing a Nest
- 2.19 Renaming a Nest
- 2.20 Opening an Old Nest
- 3 Nesting Plate parts
- 4 Adding individual plate parts to a Nest
- 5 Exchanging Nested plate parts
- 6 Exchanging a raw plate
- 7 Transforming Plate parts
- 8 Multiple plate nesting
- 8.16 Opening multiple nests
- 8.17 Moving parts from one plate to another
- 9 Data Files
- 9.16 Creating Data files
- 9.17 Reading data files
- 10 Nesting Tools
- 10.16 Burning bridges
- 10.16.1 Defining a burning bridge
- 10.16.2 Deleting a burning bridge
- 10.17 Marking and Burning Starts
- 10.18 Corner Loops
- 10.19 Auxiliary functions
- 11 Shop Drawing Information
- 12 Display the burning sketch
- 13 Display the Nested Plate
- 14 Adding a drawing form to the burning sketch
- 15 Sketch handling
- 16 Post Processing
- 17 Nesting Lists